



Konsuelo[®] plus

caffè
KIMBO[®]

Ariete

Ariete

Via San Quirico, 300
50013 Campi Bisenzio (FI)
E-Mail: info@ariete.net
Internet: www.ariete.net

SERVIZIO CONSUMATORI
NUMEROVERDE
800-215934

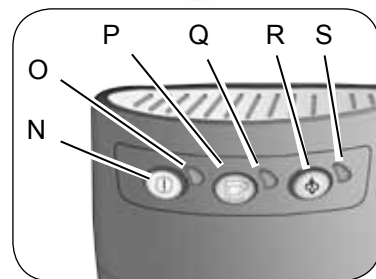 
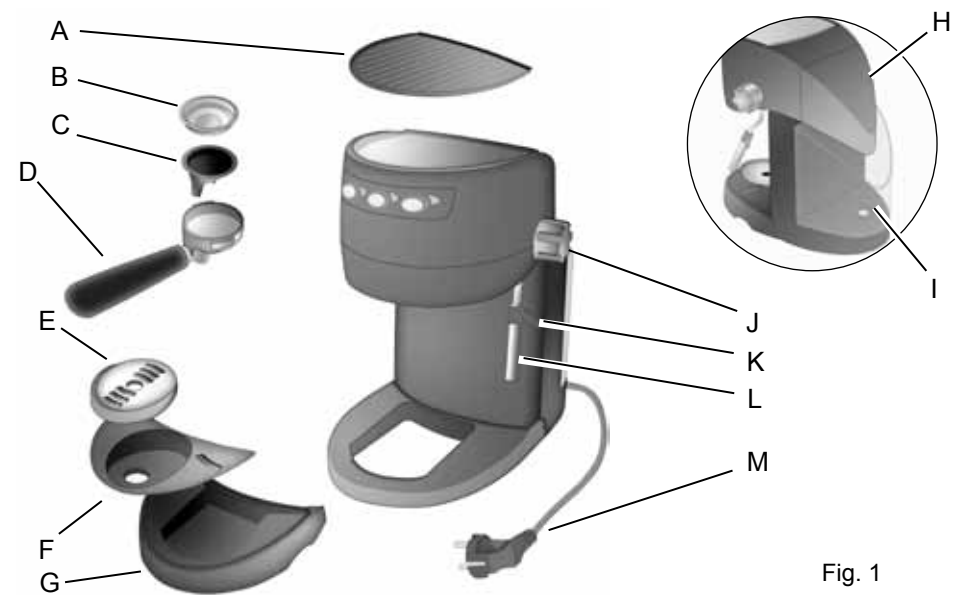 


Fig. 2

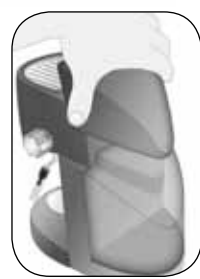 


Fig. 3

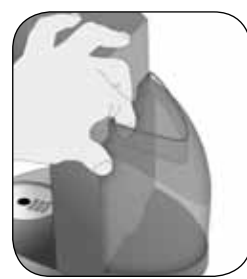 


Fig. 4



Fig. 5

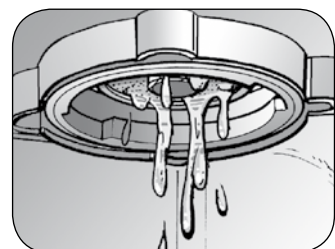 


Fig. 6



Fig. 7



Fig. 8



Fig. 9

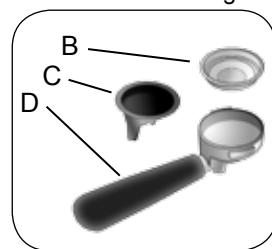 


Fig. 10

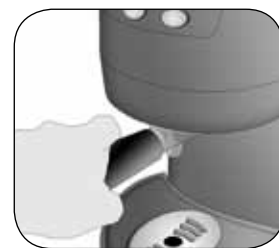 


Fig. 11



Fig. 12



Fig. 13

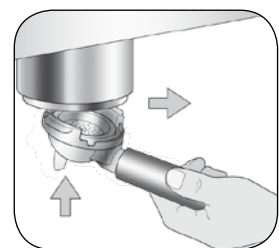 


Fig. 14



Fig. 15



Fig. 16



Fig. 17



Fig. 18



Fig. 19

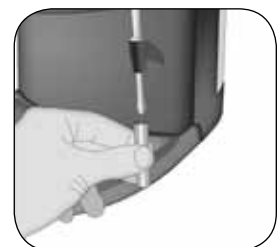 


Fig. 20



Fig. 21



Fig. 22

WITH REGARD TO THIS MANUAL

Even if the appliances are made in conformity with the European regulatory specifications in force and therefore all potentially hazardous parts are protected. Carefully read these warnings and use the appliance only for the use it is designed for in order to prevent accidents and damage. Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

The information provided in this manual is marked with the following symbols indicating:



Danger for children



Danger due to electricity



Danger of damage originating from other causes



Warning of burns



Warning - material damage

INTENDED USE

You may use your Konsuelo Plus to prepare coffee and cappuccino. This appliance is designed to be used with Kimbo pods, or with pods bearing the E.S.E. standard mark.

This appliance is designed only for private use, and is therefore to be considered unsuitable for commercial or industrial purposes.

No other use of the machine is contemplated by the manufacturer, which is exempt from any liability for all types of damages caused by improper use of the machine. Improper use also results in any form of warranty being forfeited.

RESIDUAL RISKS

The construction characteristics of the appliance this publication refers to do not allow the user to be protected from a direct jet of steam or hot water.



Warning!

Danger of burns - When dispensing hot water and steam, do not direct the jets towards others or yourself. Hold only the plastic part of the tube.



Use only containers made of material "for foods".

IMPORTANT SAFEGUARDS

READ THE INSTRUCTIONS CAREFULLY BEFORE USE.

- This appliance is designed only for private use, and is therefore to be considered unsuitable for commercial or industrial purposes.
- We decline any responsibility resulting from misuse or any use other than those covered in this booklet.
- We suggest you keep the original box, as our free-of-charge service does not cover transportation damage due to inadequate packaging of the product when sent to an Authorised Service Centre.
- This product complies with the 2006/95/CE Directive and EMC Directive 2004/108/EEC.



Danger for children

- This appliance is not suitable for use by people (children included) with physical, sensorial or mental disabilities. Users lacking experience and knowledge of the appliance, or those who have not been given the user's instructions, must be supervised by a person responsible for their safety.
- Children must be supervised at all times to ensure they do not play with the appliance.
- Do not leave the packing components near children because they are potentially dangerous.
- In the event that this appliance is to be disposed of, it is recommended that the power chord be cut. It is also recommended that all potentially dangerous components are rendered harmless to prevent children from hurting themselves when playing with the apparatus.



Danger due to electricity

- Before connecting the appliance to the power supply, make sure that the voltage indicated on the plate on the bottom of the machine corresponds to the local mains voltage.
- The use of extension leads, which have not been authorised by the appliance manufacturer, may cause damage and accidents.
- Before filling the tank with water, remember to always disconnect the appliance at the socket.

- If the electric cable is damaged it must be replaced by the manufacturer or its Technical Assistance Service, or in any case by a person with similar qualifications.
- Never let the live parts come into contact with water: this may cause a short circuit!
- Unplug before any cleaning or maintenance operations.
- **DO NOT IMMERSE THE APPLIANCE IN WATER OR OTHER LIQUIDS.**
- Unplug the appliance from the electricity supply immediately in the case of faults, defects or suspected defects after dropping. Never operate the appliance if defective. **REPAIRS MAY ONLY BE CARRIED OUT BY AUTHORIZED ASSISTANCE SERVICE CENTRES.** The manufacturer disclaims all responsibility for any damage caused by incorrect repair work.



Danger of damage originating from other causes

- Do not lift the appliance by grasping its water tank, but only by grasping its body.
- Choose a sufficiently well lit and clean environment, with an easily accessible electric socket.
- Avoid putting excessive quantities of water into the tank.
- The appliance is not to be used if it has been dropped, if there are visible sign of damage or if it is leaking. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Ariete Authorised Service Centre or, in any case, by qualified personnel.
- Do not use the appliance if the power cord appears to be damaged, with parts showing burns, etc.; an Ariete Authorised Service Centre must repair and replace the power cable, under penalty of the warranty being forfeited.



Warning of burns

- Never direct the steam or hot water jet towards parts of the body; handle the steam/hot water spout with care: risk of scalding!
- The appliance's external metallic parts must not be touched when the machine is functioning as it could cause burns.
- If water does not come out of the filter holder, it may be because the Thermocream® filter is clogged. Stop the brewing and wait ten seconds. Remove and disconnect the filter holder because any remaining pressure could cause splashes or squirts. Then clean as explained in the relevant paragraph.



Warning - material damage

- Place the machine on a stable surface where it cannot be knocked over.
- Never use the machine without water because the pump will burn out.
- Never fill the water tank with hot or boiling water.
- Do not place the machine on very hot surfaces or near open flames in order to prevent damage to the body.
- The cable must not touch any hot parts of the machine.
- Do not use sparkling water (with added carbon dioxide).
- Never put substances other than coffee into the filter holder. They could cause serious damage to the appliance.
- Do not leave the machine at a room temperature below 0°C because the water remaining in the boiler could freeze and cause damage.
- Never use the appliance outdoors.
- Do not expose the appliance to atmospheric agents (rain, sun ...).
- Before cleaning the appliance always unplug it and allow it cool down. Clean only with a non-abrasive cloth that has been slightly dampened with water, adding a few drops of mild, non-aggressive detergent (never use solvents that damage plastic).

• KEEP THESE INSTRUCTIONS IN A SAFE PLACE

DESCRIPTION OF THE APPLIANCE

- A - Removable grill
- B - Pod filter
- C - Drain pan
- D - Filter holder
- E - Cup-resting grill
- F - Drip tray
- G - Drip tray
- H - Tank cover
- I - Water tank
- J - Steam tap

- K - Rubber handle
- L - Cappuccino maker
- M - Power cord + Plug
- N - ON/OFF switch
- O - ON/OFF indicator light
- P - Coffee supply switch
- Q - Boiler temperature indicator light
- R - Steam switch
- S - Steam indicator light

Identification data

The following machine identification data are shown on the plate found underneath the machine's standing base:

- manufacturer and CE mark
- model (Mod.)
- serial number (SN)
- electrical supply voltage (V) and frequency (Hz)
- absorbed electric power (W)
- assistance toll-free number

Always give the model and serial number to the Authorised Service Centres when requesting assistance.

PRELIMINARY PHASES FOR USE

Starting the appliance

Check that the voltage of the domestic network is the same as that indicated on the technical information plate of the appliance. Place the appliance on a flat surface.

Before using the appliance for the first time wash the tank. Fill it up with fresh cool water and insert it in its housing (Fig. 4). Insert the plug into the socket, which must be earthed.

Starting the first time

After having filled the tank with cool tap water, start the machine by pressing the button (N). Indicator lamps (O) turn on to indicate that the machine is on and that the internal boiler has started to heat up. The machine will be ready for the coffee when the indicator lamp (Q) turns on. Press the coffee dispensing switch (P) until you see water come out of the filter holder seat (Fig. 6).

If you are starting the machine for the first time or after a period of time during which it has not been used, it is recommended that at least one cup of water be allowed to pass through the boiler's hydraulic circuit. Also open the steam tap (J) by slightly turning it anti-clockwise after having placed a container underneath the Maxi Cappuccino device wand (L) Fig. 7.

Then close the steam tap (J) by turning it clockwise, and press the coffee dispensing switch (P) to make the water stop coming out.

HOW TO MAKE COFFEE

Put the drip tray (C) and pod filter (B) inside the filter holder (D).

Place the pod in the filter ring (Fig. 8).

Push the pod towards the bottom of the filter with your fingers (Fig. 9). The pod must be well centred and placed inside the filter.

Now it is possible to put the filter holder in its seat.



Warning!

Tighten well by turning it from left to right while making sure you have hooked it properly onto the flange (Fig. 11).

f the pod is not inserted well, or if the filter holder is not tightened firmly, a few drops of water could leak from the filter holder.

It is a good idea to start dispensing the coffee only when the indicator lamp (Q) is on, and this is true for both the first cup and those that follow.

To start dispensing, press the switch (P): the coffee will start coming out of the spouts of the filter holder. Press the switch (P) again to stop it.

The maximum serving of coffee is 50 ml.



Warning!

Like in professional coffee machines, do not remove the filter holder when the dispensing switch (O) is on; danger of burns!



Warning!

Wait about ten seconds after the coffee has been dispensed before removing the filter holder. To remove it, turn it slowly from right to left so as to prevent splashes or spurts of water or coffee.

The pod could remain stuck in the upper part of the machine after making the coffee and when removing filter holder. To remove it, tilt the filter holder (Fig. 14) so the pod can fall onto it.

When the machine is in stand-by, the lamp (Q) will turn on and off periodically. This shows that the boiler thermostat is trip-

ping, which serves to keep the water temperature optimum.

If small puffs of steam come out of the filter holder coupling seat, this phenomenon is to be considered absolutely normal.

This machine is specifically designed to guarantee an excellent espresso coffee using Kimbo pods.

It is advisable to let the filter holder heat up a few minutes in its seat before making a cup of coffee so that the first cup is piping hot, too. This will not be necessary for the cups of coffee that follow.

Filling the water tank during use

No special operation is necessary when the water in the tank runs out as the machine is equipped with a special self-priming device. Just unplug the machine, pull out the tank and fill it with fresh cool water again.

HOW TO MAKE CAPPUCCINO

To prepare a cappuccino or hot chocolate or to heat any other beverage, press the switch (R) Fig. 15; the indicator lamp (S) turns on, ad indicare che è stata inserita la funzione vapore. When the lamp (Q) turns on, the machine is ready to generate steam.

When warming up, your appliance may release small puffs of steam from the filter holder; this is perfectly normal.



Warning!

Danger of burns! The metal cappuccino maker may reach high temperatures. Use the rubber part to move the cappuccino maker (Fig. 16).

Now open the steam tap (J) anti-clockwise, having the foresight to position a cup underneath the Maxi Cappuccino device (L) Fig. 17: at first a little water will come out, immediately followed by a strong jet of steam.

Plunge the wand all the way into the pot of milk (Fig. 18) and open the dispensing cock (J) again until you get the result you want. During these operations you may notice that the warning light (Q) goes on and off from time to time, indicating that the boiler thermostat is keeping the water required for the steam supply at the right temperature.

It is opportune you start dispensing the steam only when this indicator lamp is off. Dispense the steam for a few seconds after every use in order to free the hole of any milk residue.

After the cappuccino is prepared, press the switch (R) to cut out the steam function.

MAKING FURTHER CUPS OF COFFEE

To prepare a cup of coffee right after making cappuccino, it is necessary to bring the boiler back to the coffee preparation temperature by performing these operations: press the steam function switch (R). You may notice that the indicator lamp (Q) is on. This luminous indication serves to tell you that the temperature in the boiler is still high, i.e. it is still that for steam; you must therefore wait a few seconds until the lamp (Q) turns off. Wait until the lamp (Q) turns back on before dispensing the coffee.

If you want to cool down the boiler faster, place a container underneath the cappuccino maker, press switch (P) and at the same time keep the cock (J) open. Make water come out of the Maxi Cappuccino device until when the indicator lamp (Q) turns back on. Now close the cock (J) and turn the switch (P) off. Wait for the lamp (Q) to turn off before making another cup of coffee.

HOW TO MAKE TEA OR TISANES

When the machine is in the coffee-ready position, i.e. with the lamp (Q) on, place a cup underneath the spout (L) and press the coffee dispensing switch (P). Open the steam dispensing cock (I) immediately afterwards; in this way hot water will come out of the spout. The maximum quantity for two cups is 200 ml.

CLEANING THE APPLIANCE



Warning!

All cleaning operations described below must be performed with the machine off and with the electric plug disconnected from the socket-outlet.



Warning!

Regular maintenance and cleaning preserve and keep the machine efficient for a longer amount of time. Never wash machine components in the dishwasher. Do not use direct jets of water.

**Warning!**

All operations must be performed when the machine is cold.

Cleaning the filter holder.

Start dispensing with the filter holder connected and without the pod inside by pressing the button (P) after having placed a glass underneath the filter holder. In this way any coffee residue or impurities present in the filter holder will dissolve and be removed.

Cleaning the filter holder seat

With time, coffee residue may accumulate on the filter holder seat. It can be removed with a toothpick, a sponge (Fig. 19), or by letting water run through without fitting the filter holder (Fig. 6).

Cleaning the cappuccino maker**Warning!**

Perform this operation when the chrome-plated pipe is cold so as to prevent burns.

Unscrew the device (L) from the small pipe and wash it with running water. The small pipe can be cleaned with a non-abrasive cloth. Screw the cappuccino maker back on as far as it will go. If necessary, clean the small steam outlet hole again with a pin. After use, always let the steam nozzle run for a few seconds so to free the outlet from any possible residue.

Cleaning the tank

Periodically clean the inside of the tank with a sponge or damp cloth.

Cleaning the drip tray

Remember to empty the drip tray (G) from time to time.

Remove the grill (E) Fig. 21 and wash it under running water. Remove the drip tray (G) from the machine together with the tray (F) Fig. 22. Empty them and wash them under running water.

Cleaning the machine body**Warning!**

Clean the fixed parts of the machine using only a damp, non-abrasive cloth so as to not damage the body.

DECALCIFICATION

Good maintenance and regular cleaning preserve and keep the machine efficient for a longer amount of time, considerably limiting the risks of lime deposits forming inside the appliance. However, should your coffee machine fail to work properly as a result of the frequent use of hard, high calcium content water, you may perform a decalcification procedure to restore its operational efficiency. Ariete does not assume any responsibility whatsoever for damage to components inside the coffee machine caused by the use of non-compliant products containing chemical additives. Should you need to decalcify your appliance, please follow the instructions which come with the decalcifying product.

PUTTING OUT OF SERVICE

If you want to put the machine out of service, you must disconnect it electrically, empty the water tank and drip tray and clean it (see the paragraph on "Cleaning the appliance").

In the case of scrapping, you must separate the various materials used in making the machine and dispose of them based on their composition and on the legal provisions in force in the country of use.

TROUBLESHOOTING



If there are problems with operation, immediately turn off the machine and unplug it from the socket-outlet.

PROBLEM	CAUSE	SOLUTIONS
The coffee maker does not supply boiling water for tisanes.	Air has probably entered the circuit and deactivated the pump.	Make sure the tank is properly inserted and that the water is not below the minimum level. Repeat the operations described in the "Preliminary phases for use" paragraph.
	The steam exit hole on the dispenser wand is clogged.	Unclog any deposits that may have formed in the hole of the dispenser wand with a pin.
The coffee maker does not supply steam.	There is little water and the pump does not suck it up.	Check that the water level in the tank is correct. If necessary, fill it with cool tap water
	The steam exit hole on the dispenser wand is clogged.	Unclog any deposits that may have formed in the hole of the dispenser wand with a pin. Coffee overflowing from the edges of the filter ring.
Coffee overflowing from the edges of the filter ring.	Residues of ground coffee have remained on the gasket of the filter holder coupling seat.	Clean the seal with a toothpick or a sponge (Fig. 19).
	Faulty pod.	Slowly remove and disconnect the filter holder because any remaining pressure could cause splashes or squirts. Clean the coupling seat with a sponge (Fig. 19). Replace the pod in the filter holder.
The coffee is not supplied or flows too slowly.	The holes of the filter holder coupling seat are clogged	Turn on the machine without the filter holder, making the water run. Perform decalcification following the instructions provided with the product.
	The tanks is not inserted well.	Fit the tank securely by pushing it as far as it will go.
	There is little water and the pump does not suck it up.	Check that the water level in the tank is correct. If necessary, fill it with cool tap water.
	Faulty pod.	Slowly remove and disconnect the filter holder because any remaining pressure could cause splashes or squirts. Clean the coupling seat with a sponge (Fig. 19). Replace the pod in the filter holder.
	Broken pod.	Slowly remove and disconnect the filter holder because any remaining pressure could cause splashes or squirts. Clean the coupling seat with a sponge (Fig. 19). Replace the pod in the filter holder.